



emporia
SIMPLICITY

Thank you for purchasing an emporia product!
Please read this user guide before attempting to use your phone.

Eveline Pupeter, emporia Telecom
<https://www.emporiamobile.com>



› YOUR MOBILE PHONE AT A GLANCE

- 1 **Speaker**
- 2 **Display (screen)**
- 3  **On/Off key**
- 4 **Handset volume controls**  & 
- 5  **Keypad lock**
Press this button for two seconds to lock or unlock the keypad.
- 6  **Torch button**
- 7  **Menu key**
- 8  **Alarm key**
- 9  **Green key**
 - Start or accept a call
 - In the menu: Confirm selection
 - On standby: Access **Call history**
- 10   **Arrow keys**
 - Use these to flick through your **Contacts** and the **Menu**.
 - When the phone is on standby, press  to access **Favourites**.
 - When the phone is on standby, press  to access **Contacts**.
- 11  **Red key**
 - When in a call: End
 - When in the menu: One step back
 - When entering digits or letters: Delete
- 12    **Speed-dial-keys**
- 13  **key (voicemail)**

14  **key:** Indicates the charge status of the battery by flashing:

- Flashing red light: Battery is out of charge
- Flashing green light: Battery is being charged
- On constantly: Battery is fully charged

15  **key**

- Flashes when there is a missed call
- Stops flashing as soon as your **Call history** has been viewed

16 **Port for USB charging cable**

17 **Headset port** (Attention: This is not a charger port!)

18 Opening for removing the battery cover

19 **Torch** (LED)

20  **Emergency button** (optional)

21 **Battery cover**

> **Symbols on the screen**

 Network signal strength

 Roaming (abroad)

 Battery scale

 Missed call

 Call forwarding

 New text message (SMS)

 Profile: Silent/Sleep mode

MAX Profile: Maximum

 Profile: Meeting/Theatre mode



 Alarm on

 Bluetooth activated

 Bluetooth connected




1. PUTTING THE PHONE INTO OPERATION

1.1 Inserting a SIM card

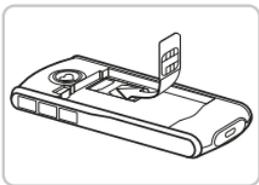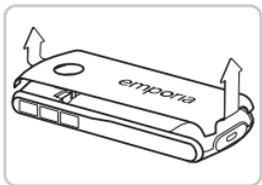

1. Remove the battery cover (opening in the top left-hand corner).
2. Insert the SIM card into the SIM card holder with the gold contacts facing down.

1.2 Inserting and charging the battery

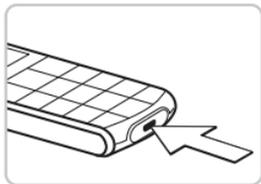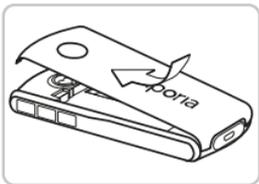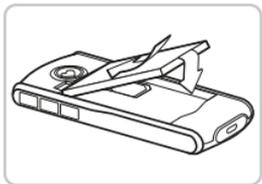

1. Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
2. Place the battery cover over the battery and click it into place.
3. Insert the charging cable into the USB port of the phone and the power plug into a mains outlet.

! *Charge the battery for at least 4 hours before the first time you use it. Only use batteries and chargers that are permitted for use with this specific model.*

1.3 Turning on the phone

- Press and hold the  key for at least two seconds until the emporia logo appears. It will take a few seconds for the home screen to be displayed.

1.4 Entering a PIN code

Enter the four-digit PIN code for your SIM card when asked to do so and confirm the entry.

 *You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find your original PIN code and PUK code in the documents supplied with your SIM card by your network operator.*

1.5 Setting the language, time and date

1. Use  to select a **Language** and then confirm your selection by pressing **OK** .
2. Set the **Time** and **Date** and then save these settings.
3. Select a **Font size**.


1.6 Saving battery power

After a few seconds of inactivity, the screen will go dark to save battery power. In the event of an incoming call or you pressing any key, the screen will light up again. If the keypad is set to lock automatically, the phone will only respond if the green  button or the  button (on the side of the phone) is pressed.

2. USING THE PHONE

2.1 Home screen

If your phone is on but not using a function, it will display the home screen. You can return to the home screen any time by pressing the red  key several times.

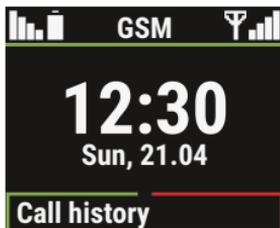


2.2 Menu

The  key will display the menu.

The menu is a list that enables you to manage the phone's various functions and adapt the phone to your needs.

- Use the arrow keys to scroll through the menu.
- The items available in the menu are **Messages**, **Radio**, **Tools**, **Contacts**, **Call history** and **Settings**.
- Use the green key  and red key  beneath the screen to confirm your selection or to return to the home screen.

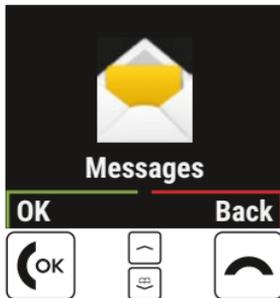

2.3 Dual-function keys

Some keys have additional functions if they are pressed and held down for a few seconds:

 **key:** Listen to your voicemail

 **key:** + for country codes, e.g. +49 for Germany

 **key:** Show **missed calls**

 **Torch button:** Torch on continuously when the phone is on

2.4 Writing text

You enter text using the keypad.

- To input text, press a number key multiple times (e.g. $2 \times$ , $1 \times$ , $3 \times$ , $3 \times$  and $3 \times$  for Hallo)
- Special characters and symbols have been assigned to the various keys, but can differ in some languages:

 **1** **ao** ., - ? ! ' @ ; () *  **2** **abc** a b c 2 ä à å â ã æ ç á c

 **3** **def** d e f 3 đ é ê ë € è ê ë  **4** **ghi** g h i 4 î ï ï ğ ħ

 **5** **jkl** j k l 5 £  **6** **mno** m n o 6 ö ñ ô œ ó ò

 **7** **pqr** p q r s 7 ß \$ §  **8** **tuv** t u v 8 ü û ü ú

 **9** **wxyz** w x y z 9 û ý ÿ  **0** **...** Space 0

 ***+ key** ., ? ! " () @ \ / : _ ; + - * = % & < > £ \$ ¥ § € □ [] { } ~ #

- Use the  key to switch between the **abc**, **ABC**, **Abc** and **123** input methods.

3. CALLS

3.1 Accepting, rejecting or ending a call

- **To answer:** Press the green  key to **accept** the call.
- **To reject or end a call:** Press the red  key.
- To mute the ringtone temporarily, press the  volume control button.

 *If the screen has gone dark during a call, press the red  key twice.*

3.2 Calling someone

› Dialling a number

1. Enter the phone number you want to dial (incl. the area code) using the keypad.
2. Start the call by pressing the green key .

› Using the redial function

1. When on the home screen, press the green key .
Your call history will be displayed.
2. Use the arrow keys  and  to select a number.
3. Start the call by pressing the green key .

 *To go hands-free during a call, open **Options** and turn on the speaker.*

4. MESSAGES (SMS)

- › Menu items: **Write message, Received, Unsent, Sent, Delete messages, Text templates, Blocked numbers for messages, Send contact via SMS, SMS's in Contacts, SMS settings**

4.1 Writing and sending a message

1. Open **Menu** ⇒ **Messages**.
2. Select **Write message**.
3. Enter the text using the keypad.
4. To specify a recipient for the SMS, open **Options** and select **Send**.
5. You can now select a **Contact** from the phone book, type in a **Phone number** using the keypad or select a number from your **Recent calls** list.

4.2 Reading a message

1. When you receive a new message, a symbol  will appear on the home screen.
2. Press the green key  for **View** to read the message immediately.
3. You can find the text message again later on in **Menu** ⇒ **Messages** ⇒ **Received**.
4. To read a message, tap on it.

5. RADIO

- Menu items in **Options: Station list, Manual input, Auto search, Loudspeaker, Information, Exit**

5.1 Searching for a station

You can set the station with the  or  key.

5.2 Adjusting the volume

You can adjust the volume of the radio with  and  on the side of the phone.

 *You cannot change the volume if you are in an Options menu item. In this case, close the Options menu first.*

5.3 Station list

This list shows all station lists already saved.

5.4 Manual input

If you know the frequency of the station you want, you can enter it here directly.

Press the  key for the decimal point.

5.5 Auto search

This function searches for all detectable stations and saves them in the station list together with their frequencies.

6. TOOLS

- › Menu items: **Alarm, Birthday reminder, Calendar, Calculator and Bluetooth**

6.1 Alarm

1. Open **Set time**.
2. Enter your desired **Alarm time** and then **Save** it.
3. The alarm is now activated and will go off at the time you have set every day.
4. When the alarm is ringing, you can press the red key  to turn it off or the green key  to activate the snooze function.
5. Select **Off** to deactivate the alarm permanently.

6.2 Bluetooth

1. Turn the Bluetooth function **On**.
2. Tap on **Connect** and on **Search for new devices**.
A list of available devices will be displayed.
3. Select the device you want to pair the phone with from the list.
4. Follow the instructions to pair the devices.

 *Devices that have been connected before will be recognised and connected automatically.*

7. CONTACTS

- › Menu items: **Search name, Add contact, Edit contact, Delete, Send contact via SMS, Copy contact, My number, Speed-dial keys, Emergency contacts, Contact settings, SMS's in Contacts**

7.1 Searching for a contact in the phone book

1. When on the home screen, press the phone book key  or open **Menu** ⇒ **Contacts** ⇒ **Search name**.
2. Use the arrow keys  and  to scroll through the entries or use the keypad to type the first letter of the contact you are looking for.
3. Start the call by pressing the green key .

7.2 Adding a contact

1. Open **Menu** ⇒ **Contacts** ⇒ **Add contact**.
2. Enter the person's name and the phone number and then **Save** them.

 *Always save names and numbers with the international dialling code, e.g. +41 for Switzerland, +43 for Austria and +49 for Germany.*

7.3 Saving a speed-dial key

You can assign speed-dial keys to numbers you call often.

1. Press one of the speed-dial keys: ,  or 
2. Enter a **Name** and **Number** or **Search** for a contact in the phone book.

7.4 Changing or deleting a speed-dial key

1. Open **Menu** ⇒ **Contacts** ⇒ **Speed-dial keys**.
2. Select a speed-dial key from the list.
3. Change or delete its link to a particular contact.

7.5 SMS's in Contacts

You can have phone book entries sent to you by text message that will automatically be added to your phone book.

The phone number will automatically be stored in your contacts when you receive an SMS with the following content:

#Name#Number#, e.g.: #Martin#+436641234567#

1. Open **Menu** ⇒ **Contacts** ⇒ **SMS's in Contacts**.
2. Select **On** or **Only from Contacts**.

8. SETTINGS

- › **Menu items: Silent/Sleep mode, Sound and alerts, Handset volume, Handsfree volume, Display and light, Time and date, Language, Text size, Call waiting, Call forward, Suppress number, Auto keypad lock, Network selection, Favourite key, Voicemail number, Emergency contacts, Emergency button, Security settings, Phone book settings, 0000 to enter settings and Master reset**

8.1 Sounds and alerts

You can personalise the settings for tones, alerts and vibration or select a set of predefined settings (profile).

- › **Profile: Silent/Sleep mode**

Visual notifications only (torch LED flashes and notifications appear on the screen), no ringtone and no vibration function

- › **Profile: Meeting/Theatre mode**

Visual notifications only (torch LED flashes and notifications appear on the screen), device vibrates and no ringtone

- › **Profile: Maximum/Bus mode**

Key tones, SMS tone and vibration function activated, ringtone volume is set on maximum

8.2 Keypad lock

You can protect your phone against accidental pressing of keys with the keypad lock.

› Manual keypad lock

Press the  key (on the side of the phone) for 2 seconds.

Keypad locked appears on the screen.

The  symbol on the screen then shows that the keypad is locked.

› Automatic keypad lock

Open the **Settings** menu and then the item **Auto keypad lock**. Now select whether the keypad should be locked automatically after **15 sec.**, **30 sec.**, **1 minute** or **5 minutes** of inactivity or whether this function should be switched off.

› Unlocking the keypad lock

Press the  key for 2 seconds.

Keypad unlocked will appear on the screen.

The phone will then respond to every press of a key again.

 *If the keypad lock is active, the phone will only respond if the green button or the  key is pressed. If any other key is pressed, the screen will remain dark to save energy.*

8.3 Favourite key

You can assign a function you intend to use frequently to the  key. If you press  when the phone is on standby, the assigned function will start immediately.

- **Selectable functions: Write message, Calculator, Calendar, Silent/Sleep mode, and Received** (messages)

 *A phone number cannot be assigned to the favourite key. The speed-dial keys must be used to do that.*

8.4 Voicemail number

Enter the number for your voicemail.

You will find this number in the documents supplied by your network provider. Press and hold the  to listen to your voicemail.

8.5 Security settings

PIN: PIN request on/off, change PIN

Phone code: on/off, change (factory preset code: 1234)

8.6 0000 to enter settings

Activate this safety mode to prevent changes being made to settings unintentionally.

8.7 Master reset

You can restore all the factory settings on your phone (factory preset code: 1234).

9. EMPORIA EMERGENCY CALL FUNCTION

If you use the battery cover with the integrated emergency button, you can enable the phone's emergency call function. Read the instructions carefully and set the emergency function according to your needs. You can save up to five emergency contacts (family members, friends and official institutions).

- In an emergency, press and hold the emergency button on the back of the phone.
- The five preset numbers will be dialled automatically in the order in which you have saved them.

If it is not possible to get through to anyone on the first number, the second number will automatically be dialled.

If it is not possible to get through to anyone on the second number, the third number will automatically be dialled, and so on. (The phone will go through a list of five numbers a maximum of three times.)

- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying:

"You are about to receive an emergency call. Please press the 0 key three times to establish the connection."

i *The contact must press the 0 key three times within 60 seconds or the next emergency contact will be called. This prevents the emergency call from going through to a contact's voicemail or answerphone.*

-
- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To disable this function, press and hold the  button for approx. three seconds or turn your device off completely using the  button and then turn it on again.
 - To cancel the emergency call, press and hold .
 - During the emergency call, a warning tone will sound continuously to alert anyone nearby and the person being called.
 - If you do not have any emergency contacts saved, have no credit on your prepaid phone card or are connected to another network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

 *If you want to add the number of an official institution such as the police or fire brigade as an emergency contact, you must check that this is okay with the respective institution beforehand. We do not assume liability for any costs incurred through you calling such an institution by mistake.*

› **Adding/editing emergency contacts**

In the **Settings** menu ⇒ **Emergency contacts**

⇒ **Add emergency contact**

⇒ Select an entry (e.g. **Emergency contact 1**)

by pressing  

⇒ Select **OK** by pressing 

⇒ Select **Private** or **Help organisation** 

⇒ Select a contact

› **Enabling the emergency button**

In the **Settings** menu

⇒ **Emergency contacts**

⇒ **Emergency button**

⇒ **On/Off**

› **Pre-alarm**

The pre alarm is a warning tone that sounds for ten seconds and alerts anyone nearby to the emergency call.

After this, the emergency call sequence starts.

In the **Settings** menu,

⇒ **Emergency contacts**

⇒ **Pre-alarm**

⇒ **On/Off**

➤ **GUARANTEE AND SERVICE**

Manufacturer:	emporia telecom GmbH + CoKG Industriezeile 36, 4020 Linz, Austria
Importer:	Emporia UK and Ireland Limited · Cardinal Point, Park Road, Rickmansworth, Hertfordshire, WD3 1RE, United Kingdom
Contact:	www.emporiatelecom.co.uk or www.emporiatelecom.ie
Brand name:	emporia
Model:	emporiaSIMPLiCiTY (V27i)

➤ **Scope of delivery**

- **Mobile phone:**
emporiaSIMPLiCiTY (V27i)
- **Extra battery cover without an emergency button**
- **Battery:** AK-V27
- **USB cable**
- **AC adapter:** RL-600mA-UK
- **Table charging unit:** TL-V27

➤ **Support**

- **Emporia Service Centre**
service@emporiatelecom.co.uk
Monday-Friday, 12⁰⁰-4⁰⁰ pm
- **United Kingdom · EN**
www.emporiatelecom.co.uk/
support/contact
+44 1923 94 77 78
- **Ireland · EN**
www.emporiatelecom.ie/
support/contact
+353 0818 000 102

➤ **Guarantee**

This guarantee is only valid if original batteries supplied by emporia have been used.

- **Mobile phone:** 12 months
- **Battery:** 6 months

➤ **Technical details**

- **Dimensions:** 125.3 × 57.6 × 12.6 mm
- **Weight:** 90 g
- **Battery:** Li-ion 3.7 V, 1200 mAh, 4.44 Wh (replaceable)
- **AC adapter:**
input: 100 - 240 V AC, 50/60 Hz, 0.15 A;
output: DC 5.0 V, 0.6 A, 3.0 W
- **Table charging unit:**
input = output
- **Standby time:** 480 h*
- **Talk time:** 400 min*
(*The battery life can be reduced depending on network coverage and active applications.)
- **Internal antenna:**
SAR body: 0.93 W/kg
SAR head: 0.92 W/kg
SAR-limbs: 1.16 W/kg
- **Operating temperature range:**
-10° - +40° C
- **Hearing Aid Compatible M4/T4**
- **Bluetooth V3**
- **Display:** 2.0"; 220 × 176 px
- **RAM:** 32 Mb
- **Memory (ROM):** 64 Mb
- **SD card:** < 8 GB

› Frequencies

- **BT:** 2402 MHz - 2480 MHz
Transmitter power: < 0.0032 W
- **FM:** 87.6 MHz - 107.9 MHz
- **E-GSM 900/GPRS 900/EGPRS 900:**
TX: 880 - 915 MHz; RX: 925 - 960 MHz
Transmitter power: < 1.6827 W
- **E-GSM 1800/GPRS 1800/EGPRS 1800:**
TX: 1710 - 1785 MHz; RX: 1805 - 1880 MHz
Transmitter power: < 0.8204 W

› Safety information

- Turn off your phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20 cm between a pacemaker and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand. Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals! (Protection class 3)
-  To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when hands-free mode is activated or the emergency button has been pressed.
- Using a headset on a high volume can cause hearing impairments. Check the volume of the headset you are using.
- The phone and the accessories may contain small parts. Keep the phone out of the reach of young children.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.

-
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.
 - This device has been tested for typical applications where the device is carried on the body. To meet the RF exposure requirements, the minimum distance between the body, in particular the user's head, and the handset including the antenna must be 0 cm. Belt clips, holsters and similar accessories from third parties used with this device must not contain metallic components. Accessories carried on the body that do not meet these requirements may not meet the RF exposure requirements and should be avoided. Only use the device's built-in antenna or an approved antenna.
 - This device complies with the essential requirements and other relevant provisions of **UK Radio Equipment Regulations (S.I. 2017 No. 1206)**. All the important radio test cases have been written.
 - Caution: Risk of explosion if the battery is replaced by the wrong type. Dispose of the used batteries according to the instructions.
 - The device complies with RF specifications when the device is 5mm from the body.

› Intended use

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- It is only designed for European network standards (AT, BE, CZ, DE, DK, ES, FI, FR, GB, HR, HU, IE, IT, NL, NO, PL, PT, SE, SI, SK, SZ and TR).
- Do not leave it where it will be directly exposed to the sun.
- Using it for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
- The adapter is only suitable for use in conjunction with a standard household mains socket that is connected to your electrical grid and uses 100-240 volts, 50/60Hz (10/16A), of alternating voltage.

> Disposal

• Disposing of the packaging

The packaging and packaging aids are recyclable and should be recycled.



• Disposing of the battery

Batteries should never be disposed of as domestic refuse! As a consumer you are legally required to return used batteries. They can be handed in at one of your community's local collection points or at specialist stores.



• Disposing of the device

If this product ever wears out, please don't dispose of it as domestic refuse. To ensure you don't cause damage to the environment, take it to a collection or recycling centre where used devices are processed for recycling in an environmentally friendly manner.



> Declaration of conformity (DOC)

emporia telecom GmbH + CoKG
(Industriezeile 36, 4020 Linz, Austria),
hereby declares that the
emporiaSIMPLiCiTY (V27i)
telecommunication or radio device complies with:

- 1907/2006 REACH
- 2011/65/EU RoHS
- 2014/53/EU Radio Equipment Directive (RED)
- (EU) 2022/2380 Amendments to the Radio Equipment Directive

The full text of the declarations of conformity can be viewed on this web page:

www.emporiamobile.com/doc

A handwritten signature in black ink that reads "Eveline Pupeter". To the left of the signature are the letters "CE" in a light blue, sans-serif font.

Eveline Pupeter
CEO, emporia Telecom
07/12/2023, Linz/Austria



<https://www.emporiamobile.com/doc>

- DE Druckfehler, Irrtümer und technische Änderungen vorbehalten.
- EN Misprints, errors and technical changes excepted.
- IT Con riserva di errori di stampa, inesattezze e modifiche tecniche.
- FR Toutes erreurs d'impression, erreurs et modifications techniques réservées.
- NL Drukfouten, vergissingen en technische wijzigingen voorbehouden.

